

The Sanctuary

WALLET/iPod/KEYS/WATCH/LOOSECHANGE/RING
JEWELRY/PDA/MP3PLAYER/MONEYCLIP/GLASSES
CELLPHONE/BLUETOOTHHEADSET/CREDITCARDS
GAMECONSOLE/DIGITALACCESSORIES/BUSINESS
CARDS/GLASSES/WALLET/MOBILEPHONE/iPhone
EARBUDS/BRACELET/NOTEPAD/SHADES/WALLET
PDA/MP3PLAYER/MONEYCLIP/GLASSES/CELLPHONE
HEADSET/CREDITCARDS/GAMECONSOLE/BUSINESS
CARDS/SHADES/COINS/MOBILEPHONE/NOTEPAD
iPhone/NOTEPAD/BUSINESSCARDS/COINS/iPod
JEWELRY/PDA/WALLET/KEYS/WATCH/MONEYCLIP
GLASSES/CELLPHONE/BLUETOOTHHEADSET/PDA
NECKLACE/GAMECONSOLE/DIGITALACCESSORIES
PDA/WALLET/iPod/KEYS/WATCH/LOOSECHANGE
COINS/MP3PLAYER/MONEYCLIP/RING/MONEYCLIP
DIGITALACCESSORIES/BUSINESSCARDS/SHADES
NECKLACE/MOBILEPHONE/iPhone/GAMECONSOLE
PDA/MP3PLAYER/iPod

Now your things have a place to rest and recharge.

Everything should be this simple.

INTRODUCTION /

Congratulations on your new acquisition. From now on all your pocketable accessories can be consigned to The Sanctuary when you get to the office or home. Your electronic devices will also be charging and in one place, ready for you when you move on. What could be simpler?

As a designer, I seek practical solutions to the everyday problems we all face; where to put the multitude of personal items so that they are easily located again when later needed, how to ensure nothing is overlooked when they are gathered up the next time, how to ensure your phone, Blackberry & iPod are always charged when needed; how to reduce the office desktop and home tabletop clutter. **The Sanctuary is my solution for you to enjoy.**




DOMINIC SYMONS


Designer/Founder, BLUELOUNGE

ALWAYS VISIT BLUELOUNGE.COM FOR MORE GREAT PRODUCTS


SETUP / GENERAL

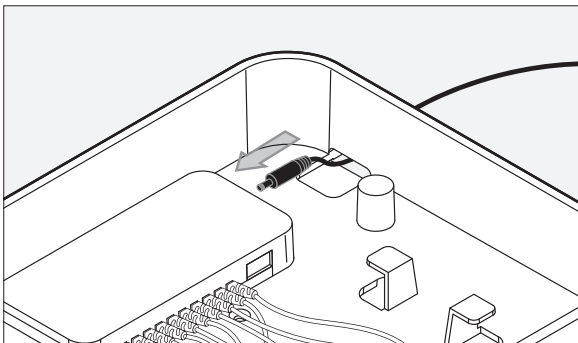


01 / Plug AC adapter into the Sanctuary as shown, then into the mains.

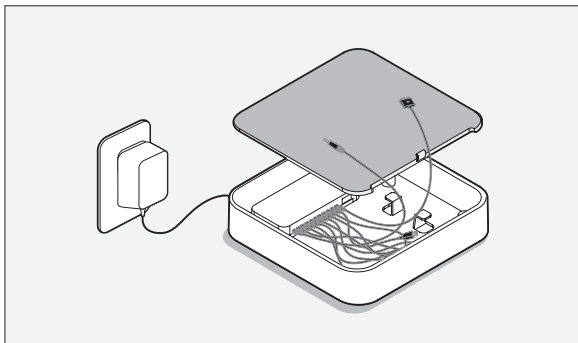

02 / Lift inner tray and select your connectors.

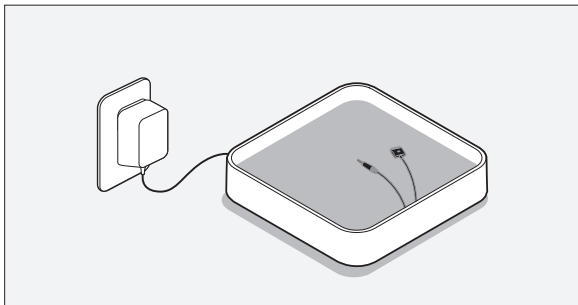

03 / Replace tray with selected connectors on top, add electronic devices and charge.

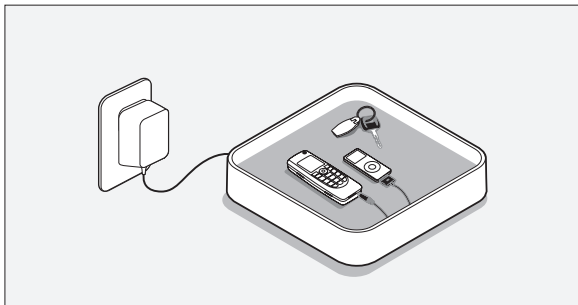


04 / Add keys, wallet and watch as desired.


When the AC adapter is plugged in, the LED will remain on to indicate The Sanctuary is either ready for charging or is in the process of charging attached devices. The LED will flicker, dim or go dark if too many devices are connected simultaneously. This indicates that the unit has reduced or removed power from the connectors and may not charge any of the connected devices properly. Disconnect one or more devices so that the LED remains lit during the charging process.

Only use The Sanctuary with the supplied 6V power adapter.


SETUP / ADDITIONAL

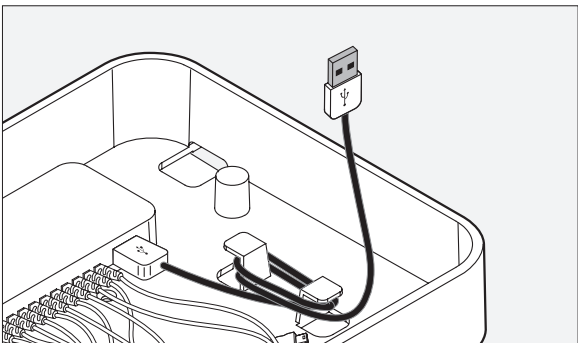


01 / Plug in own USB charge cord and wind around the cable management pins.

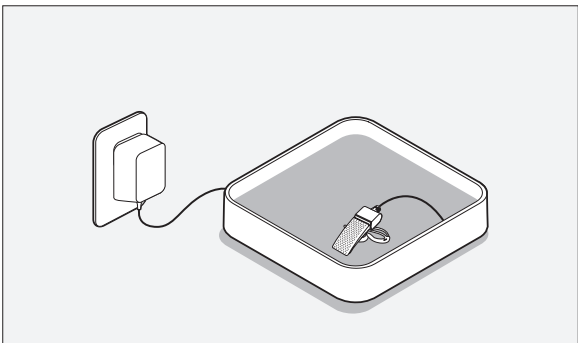

02 / Charge Bluetooth headsets, portable games consoles, and hundreds more devices.

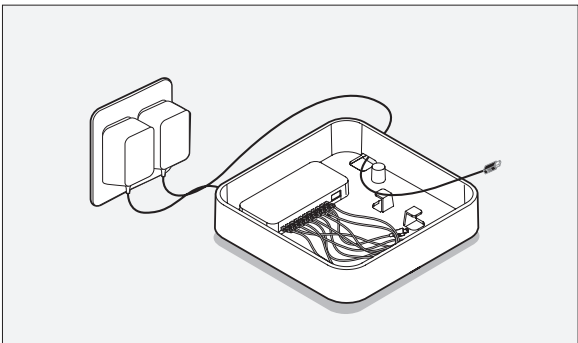

03 / Add other unsupported devices by adding your existing AC adapter as shown.

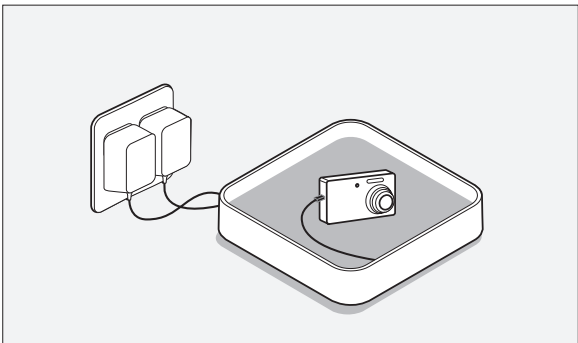

04 / Pull your cords through and charge all your devices in one neat location.



USB connectors for additional devices can be purchased at www.bluelounge.com

BUILT-IN CONNECTORS / MODELS

01 / NOKIA a



5070	6111	6263	7360	BH-300	E62	N91
5200	6120	6265	7370	BH-301	E65	N92
5300	6121	6265i	7372	BH-302	E90	N93
5310	6125	6267	7373	BH-303	HS-26W	N93i
5500	6126	6268	7390	BH-500	N70	N95
5610	6131	6270	7500	BH-501	N71	SU-27W
5700	6133	6275i	770	BH-600	N72	
6070	6136	6280	8800	BH-700	N73	
6080	6151	6282	BH-100	BH-701	N75	
6085	6152	6288	BH-200	BH-800	N76	
6086	6155	6290	BH-201	BH-801	N77	
6101	6155i	6300	BH-202	BH-900	N80	
6102	6165i	6500	BH-206	E50	N800	
6102i	6233	6555	BH-207	E61	N80ie	
6103	6234	6822	BH-208	E61i	N90	
1200	3109					
1208	3110					
1650	3152					
2135	3155					
2630	3155i					
2760	3250					
2865i	3500					


02 / NOKIA b



2100	2275	3100	3315	3570	3650	5185i
2112	2280	3105	3330	3585	3660	5190
2115i	2285	3108	3350	3585i	5100	5210
2116	2300	3120	3360	3586	5110	5300 Classic
2116i	2310	3125	3361	3586i	5120	5510
2118	252	3200	3390	3587i	5125	6010
2125	2600	3205	3395	3588i	5140	6015
2125i	2610	3210	3410	3589i	5140i	6015i
2126i	2626	3220	3510	3590	5160	6016i
2128i	2650	3230	3510i	3595	5165	6019i
2255	2651	3285	3520	3600	5165i	6020
2260	2652	3300	3530	3610	5170i	6021
2270	282	3310	3560	3620	5180i	6030
1100	1112					
1101	1221					
1108	1260					
1110	1261					
1110i	1600					

6060	6190	6260	6590i	6820	7610	8800	9300i	HS-54W
6061	6200	6310	6600	6822	7650	8801	9500	HS-55W
6062	6210	6310i	6610	7110	7700	8810	BH-203	HS-56W
6100	6220	6340i	6610i	7160	7710	8850	BH-204	N-Gage
6101Classic	6225	6340i	6620	7190	8210	8850 Gold	BH-205	N-Gage QD
6108	6230	6360	6630	7200	8250	8855	E60	N-Gage QD-
6110	6230i	6370	6650	7210	8260	8860	E70	Shorty
6120	6235	6385	6651	7250	8265	8890	HDW-3	THR850
6150	6235i	640	6670	7250i	8265i	8910	HS-11W	THR880
6160	6236i	650	6680	7260	8270	8910i	HS-12W	
6161	6250	6510	6681	7270	8280	9200	HS-21W	
6162	6255	6560	6682	7280	8290	9210i	HS-3W	
6170	6255i	6585	6800	7380	8310	9290	HS-4W	
6185i	6256i	6590	6810	7600	8390	9300	HS-53W	

 03 / MINI-USB

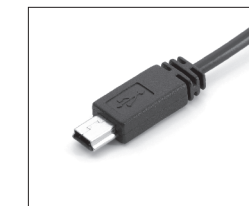

C720W	Nuvi 670	Messenger	P4350	PPM 300	JAQ3	Digi Walker-
C800	Nuvi 680	iPAQ-	Artemis-	Prophet	JAQ4	268
D810	StreetPilot-	RX4000	P6300	S310	JASJAM	Digi Walker-
M700	c330	iPAQ-	Breeze	S621	JasJar	268+
P800W	StreetPilot-	RX5700	Cavalier-	S630	K-JAM	Digi Walker-
U1000	c340	iPAQ Travel	C730	S720	PDAL	269
GARMIN	StreetPilot-	Companion	Dash	SDA	SP JAS	Digi Walker-
Forerunner-	c550	HTC	Excalibur	Shadow	SP3	269+
205	StreetPilot-	5800	(S620)	Tilt 8925	SP3i	Digi Walker-
Forerunner-	i2	(Libra 100)	Faraday	Tornado	SP4m	336BT
301	StreetPilot	Advantage-	Feeler	Touch	SP5	Digi Walker-
Forerunner-	i3	X7500-	Herald	Trinity 100	SP5m	336g
305	StreetPilot	(Athena-	Hermes	(P3600)	JABRA	Digi Walker-
Edge 205	i5	100/AMEO)	Hermes 100	Typhoon	A125s	336i
Edge 305	Quest	Advantage-	Hermes 200	TyTN	BT620s	Digi Walker-
Nuvi 200	GRUNDIG	X7501	Hermes 300	TyTN II	BT8040	339
Nuvi 250	GR890	Amadeus	Hurricane	Universal	KROME	Digi Walker-
Nuvi 270	HP	Apache	Kaiser	Vox (S710)	Navigator-	8390
Nuvi 300	iPAQ 510	Artemis-	Love	Wallaby	F1	Digi Walker-
Nuvi 310	iPAQ 512-	P3300	Magician	Wizard	Spy	8870
Nuvi 350	Voice Mes-	Artemis-	Mogul-	XV6700	LG	Digi Walker-
Nuvi 360	senger	P3350	(PPC-	I-MATE	HBM-500	A201
Nuvi 370	iPAQ-	Artemis-	6800)	Jam	MIO	Digi Walker-
Nuvi 650	RW6800	P3600	MTeoR	Jamin	Digi Walker-	A701
Nuvi 660	Multimedia-	Artemis-	Oxygen	JAQ	168	Digi Walker-

C220	Digi Walker- P550	H550	F3	ROKR E2	V323	Xda Mini S	8100	Walkman- NW-S205F
Digi Walker- C230	MOTOROLA	H605	Moto Q	ROKR E6	V323i	Xda Phone	8200	TOMTOM
Digi Walker- C310x	A1200	H670	PEBL	ROKR S9	V325	Xphone II	8300	Go 520
Digi Walker- C320	A70	H700	PEBL E6	ROKR Z6	V325i	Xphone II m	8310	Go 720
Digi Walker- C510	A668	H800	PEBL U6	S805	V360	Xda	9000	Go 920
Digi Walker- C510	A70	HS830	RAZR H3	SLVR	V361	Xda Cosmo	9100	One
Digi Walker- C510E	A732	HT820	RAZR maxx- Ve	SLVR- imode	V365	Xda Exec	9600	XL
Digi Walker- C520	A780	ic402	RAZR V3	SLVR L6	V660	XDA Mini- Pro	S100	TOSHIBA
Digi Walker- C520	A910	ic502	RAZR V3c	SLVR L7	V8	Xda Neo	S200	MEU202-SL
Digi Walker- C710	C305	ic902 Deluxe	RAZR V3e	SLVR L7c	W315	Xda Orion	RCA	UBIQUIO
Digi Walker- C710	C362	KRZR K1	RAZR V3i	SLVR L7i	W375	Xda SP	Lyra-	501
Digi Walker- C720	C363	KRZR K1m	RAZR V3r	SVLR L7i	W490	Xda Trion	Jukebox	503G
Digi Walker- H610	E1070	KRZR K3	RAZR V3t	T305	W510		RD2762	
Digi Walker- H610	E610	L2	RAZR V3xx	V190	NETGEAR	QTEK	Walkman-	SONY
Digi Walker- H610	E615	L6	RAZR V6-	V191	Skype Ph.	1010	NW-E405	
Digi Walker- P350	E680	M300	RAZR maxx	V195	02	1020	Walkman-	
Digi Walker- P350	E685	M500	MOTO Q-	RAZR WIRE	V197	Xda II Mini	4040	NW-E407
Digi Walker- P350	H3	MOTO Q-	music 9m	RIZR Z3	V235	Xda IQ	8010	Walkman-
Digi Walker- P350	H500	MOTOFONE-	RIZR Z6	V320	Xda Mini	8020	NW-E507	

04 / MICRO-USB



All Micro-USB compatible devices.

05 / SAMSUNG a



ACE	SCH-A599	SCH-I760	SGH-A608	SGH-E105	SGH-E770	SGH-	SGH-X100	SGH-X670
MM-5600	SCH-A610	SCH-N181	SGH-A800	SGH-E300	SGH-E800	R225M	SGH-X105	SGH-X680
MM-A960	SCH-A630	SCH-N182	SGH-C100	SGH-E310	SGH-K258	SGH-S300	SGH-X160	SGH-X680
SCH-A210	SCH-A645	SCH-N191	SGH-C120	SGH-E315	SGH-N200	SGH-	SGH-X166	SGH-X700
SCH-A310	SCH-A650	SCH-N195	SGH-C200	SGH-E316	SGH-N288	S300M	SGH-X200	SGH-X800
SCH-A399	SCH-A670	SCH-N330	SGH-C207	SGH-E317	SGH-N400	SGH-S307	SGH-X300	SGH-ZX10
SCH-A475	SCH-A720	SCH-N370	SGH-C210	SGH-E330	SGH-N500	SGH-S400I	SGH-X425	SGH-ZX20
SCH-A505	SCH-A790	SCH-N375	SGH-C225	SGH-E330N	SGH-N620	SGH-S401I	SGH-X426	SPH-A110
SCH-A509	SCH-A795	SCH-N625	SGH-C300	SGH-E335	SGH-N625	SGH-T100	SGH-X427	SPH-A120
SCH-A530	SCH-A809	SCH-U340	SGH-C416	SGH-E340	SGH-N626	SGH-T108	SGH-X460	SPH-A400
SCH-A539	SCH-A850	SCH-U410	SGH-C417	SGH-E340E	SGH-N628	SGH-T200	SGH-X461	SPH-A420
SCH-A561	SCH-A870	SCH-U540	SGH-D100	SGH-E350	SGH-N635	SGH-T208	SGH-X475	SPH-A580
SCH-A563	SCH-A890	SCH-U620	SGH-D307	SGH-E355	SGH-P107	SGH-T209	SGH-X480	SPH-A620
SCH-A564	SCH-A900	SCH-X199	SGH-D347	SGH-E360	SGH-P200	SGH-T309	SGH-X495	SPH-A640
SCH-A570	SCH-A930	SCH-X209	SGH-D357	SGH-E370	SGH-P207	SGH-T319	SGH-X496	SPH-A790
SCH-A591	SCH-A950	SCH-X219	SGH-D406	SGH-E380	SGH-P408	SGH-T400	SGH-X497	SPH-A900
SCH-A592	SCH-A970	SCH-X309	SGH-D407	SGH-E400	SGH-P735	SGH-T408	SGH-X506	SPH-A920
SCH-A595	SCH-A990	SCH-X319	SGH-D410	SGH-E600	SGH-P777	SGH-T410	SGH-X507	SPH-A960
		SCH-X359	SGH-D415	SGH-E630	SGH-Q200	SGH-T500	SGH-X510	SPH-N200
		SGH-A200	SGH-D500	SGH-E635	SGH-Q208	SGH-T609	SGH-X520	SPH-M500
		SGH-A288	SGH-D500C	SGH-E700	SGH-Q300	SGH-T619	SGH-X530	
		SGH-A300	SGH-D500E	SGH-E710	SGH-R200	SGH-T709	SGH-X600	
		SGH-A308	SGH-D508	SGH-E715	SGH-R208	SGH-T719	SGH-X620	
		SGH-A400	SGH-D600	SGH-E720	SGH-R210	SGH-V200	SGH-X640	
		SGH-A408	SGH-D600E	SGH-E730	SGH-R220	SGH-V205	SGH-X650	
		SGH-A500	SGH-E100	SGH-E760	SGH-R225	SGH-V206	SGH-X660	

06 / SAMSUNG b



SCH-U740	SGH-A717	SGH-U900	SGH-A727	SGH-D820	SGH-E570	SGH-i607	SGH-T409	SGH-T819
SGH-A117	SGH-A737	SGH-A127	SGH-A747	SGH-D828	SGH-E590	SGH-i617	SGH-T439	SGH-U100
SGH-A517	SGH-A797	SGH-A436	SGH-D520	SGH-D830	SGH-E740	SGH-I710	SGH-T509	SGH-U600
SGH-A437	SGH-D800	SGH-A437	SGH-D800	SGH-D840	SGH-E780	SGH-J600	SGH-T519	SGH-U700
SGH-A706	SGH-D806	SGH-A706	SGH-D806	SGH-D900	SGH-E790	SGH-P300	SGH-T539	SGH-X820
SGH-A707	SGH-D807	SGH-A707	SGH-D807	SGH-D900i	SGH-E840	SGH-P310	SGH-T629	SGH-X830
SGH-A707	SGH-D808	SGH-A707	SGH-D808	SGH-E200	SGH-E900	SGH-P910	SGH-T639	SGH-Z150
				SGH-E250	SGH-F300	SGH-S501	SGH-T729	SGH-Z230
				SGH-E390	SGH-F500	SGH-T219	SGH-T739	SGH-Z240
				SGH-E500	SGH-i600	SGH-T329	SGH-T809	SGH-Z360

SGH-Z400	SGH-Z540	SGH-Z620	SGH-Z710	SPH-A303	SPH-A503	SPH-M510	SPH-M620	Tbird J600
SGH-Z510	SGH-Z560	SGH-Z650i	SGH-ZV40	SPH-A503	SPH-M300	SPH-M610	SPH-U510	

07 / VARIOUS BRANDS




AUDIOVOX	CDM8930	1155	K434N	KE424	QCP2027	MM-A700	WEP200	SCP-7300
CDM8400	CDM8940	2119	K440	KE424C	QCP2035	SGH-X660	WEP410	SCP-8100
CDM8410	CDM894-	2119b	K444	KE433	QCP2035A	SPH-A460	WEP500	SCP-8400
CDM8450	VW	2135	K454	KE433C	LG	SPH-A500	SANYO	SCP5500
CDM861-VM	CDM9200	2235	K454L	KE434	C810	SPH-A560	4930	SCP7300
CDM8615	CDM9900	2255	K454LC	KE434C	HBM-300	SPH-A600	MM-5600	SCP8100
CDM8615CS	CDM9950	2300	K454N	Koi	PM225	SPH-A620	MM-7400	SCP8200
CDM8900	PDM8920	2325	K454NC	KX1	VI-125	SPH-A660	MM-7500	VI-2300
CDM8910BM	PM8912	2345	K480	KX1i	VX3200	SPH-A740	MM-8300	VM4500
CDM891-VM	PM8920	3200	K493LC	KX1v	LOGITECH	SPH-A760	MM-9000	TOSHIBA
CDM8910-VM	PPC-6700	3225	K494	KX2	Mobile Ex-press 980	SPH-A800	PM-8200	CDM9950-SP
CDM8912	PPC-6800	3245	K494LC	KX413	MOTOROLA	SPH-A820	RL-4920	VM4050
CDM8915	Mogul	3250	K494NC	KX414	C290	SPH-A840	RL-2500	
	SMT 5600	7135	K494XLC	KX424	G520	SPH-A880	RL-4920	
	VI600	BLADE	K7	KX433		SPH-A940-	SCP-2000	
	BENQ	K10	K7 RAVE	KX434	i500	(MM-A940)	SCP-2300	

08 / PALM




Centro	Treo 650	Treo 700w	Treo 750v	Tungsten T5
LifeDrive	Treo 680	Treo 700wx	Treo 755p	Z22
Palm TX	Treo 700p	Treo 750	Tungsten E2	

 09 / LG

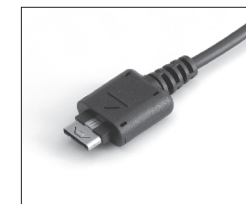

AX275	AX8600	CG180	Chocolate-Green	EnV	KG900	PRADA-	VX8800	VX9900
AX380	CE110	Chocolate-Cherry	Chocolate-Pink	EnV-Orange	MG800C	KE850	VOYAGER-	VX9900
		Chocolate-VX 8600	Chocolate-Red	EnV9900	MUZIQ-	RUMOR	VX10K	
		Chocolate-Mint	Chocolate-White	KE820	MUZIQ-	Shine-KE970	VX5400	
		Chocolate-CU515	Chocolate-CU575	KE850	LX160	Shine U970	VX8350	
				KG320	MUZIQ-	The Wave-AX380	VX8500	
				KG800	LX570	TRAX	VX8600	
				KG808	MUZIQ-	VENUS-	VX8700	
				KG810	PINK		VX9400	

 
10 / SONY ERICSSON

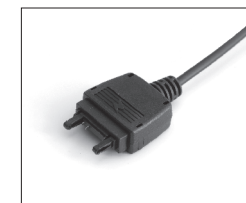


Black	HBH-	IV835	J220c	K310i	K610i	K790c	P1i	W200i
C902	DS970	HBH-	J220i	K320i	K610im	K790i	P990c	W300
C702a	HBH-	PV700	J221	K510	K618	K800	P990i	W300c
D750	GV435	HBH-	J230	K510a	K618i	K800c	S500	W300i
D750i	HBH-	PV705	J230a	K510c	K630i	K800i	S500i	W350a
		J100	J230c	K510i	K660i	K810i	S600i	W380a
		J100a	J230i	K530i	K750	K818c	T250a	W550c
		J100c	K200a	K550	K750c	K850	T250i	W550i
		J100i	K200i	K550c	K750i	K850i	T650i	W580c
		J110i	K220i	K550i	K758c	M600i	V630i	W580i
		J120i	K310	K550im	K770i	M600i	V640i	W600
		J220	K310a	K610	K790	M608	W200	W600c
		J220a	K310c	K610c	K790a	M608c	W200a	W600i

W610	W700i	W800i	W850i	W910	Z250i	Z525a	Z550i	Z710c
W610c	W710	W810	W880	W910i	Z310a	Z525i	Z555i	Z710i
W610i	W710c	W810c	W880i	W950	Z310i	Z530	Z558	Z712
W618c	W710i	W810i	W888c	W950c	Z320i	Z530c	Z558c	Z750
W660	W712	W830	W890i	W950i	Z520a	Z530i	Z558i	Z750a
W660i	W760i	W830c	W900	W958c	Z520c	Z550	Z610	Z750i
W700	W800	W830i	W900c	W960	Z520i	Z550a	Z610i	
W700c	W800c	W850	W900i	W960i	Z525	Z550c	Z710	

 11 / iPod/iPhone MODELS

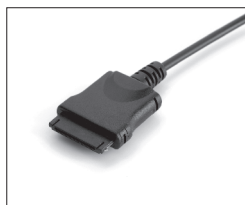


Made for:

 

For use with:



 12 / USB

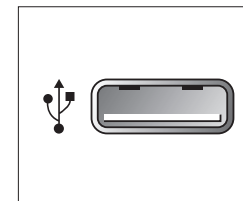

Hundreds of devices can be charged via USB power. Simply plug in your own USB cord, or visit www.bluelounge.com to purchase custom connectors.

PACKAGE CONTENT /

01 / One Sanctuary with 12 Built-in Connectors

02 / One Reversible Inner Tray (Black/Tan)

03 / One AC Adapter

04 / User Manual & Compatibility List

THE SANCTUARY /

Input: 6V

Output: 5-5.7V depending on connectors

Current Limit: 500mA per connector

WALL ADAPTER /

Input: 110-240V

Output: 6V - 3amps

Operating temperatures 0-40 degrees Celsius

For indoor use only

Only use The Sanctuary with the supplied power adapter

SERIAL NUMBER /

08101.0

WARRANTY /

Bluelounge Design LLC warrants the enclosed **THE SANCTUARY** to be free from defects in materials and workmanship during normal and contemplated use for a period of one year from the verifiable date of purchase from the original retail point of sale. Bluelounge makes no other representations or warranties for **THE SANCTUARY**. Bluelounge's sole obligation shall be the repair or replacement of the portion of the product that is found to be defective in materials or workmanship under normal use during the one-year warranty period. Please contact customerservice@bluelounge.com for refund and replacement information applicable to you. All returned products and receipts should be sent to: **Bluelounge Design, 32 S. Raymond Ave #9, Pasadena, CA 91105. +1 626 564 2802**

The duration of any implied warranty including that of merchantability or fitness for any particular purpose shall be limited to the one year period commencing original verifiable purchase date of the product from a retail point of sale. In no case will Bluelounge be liable for any indirect, consequential or incidental damage for breach of this or any other warranty, express or implied for any reason. The foregoing limitations are void where prohibited, and may not apply to you. This warranty gives you specific legal rights and may also have other rights that vary from place to place.

DESIGNED BY BLUELOUNGE DESIGN. Patent pending. **THE SANCTUARY** and design TM© **BLUELOUNGE DESIGN.**
All rights reserved. Made in China.

"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards. "Works with iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. iPod is a trademark of Apple Inc., registered in the U.S. and other countries. iPhone is a trademark of Apple Inc.



blueLounge®

BLUELOUNGE DESIGN
32 S. Raymond Ave. No.9
Pasadena, CA 91105

T. +1 626 564 2802

F. +1 626 628 3287

bluelounge.com